Do not leave in oven at temperatures above 440°F. Damage to silicone grips

Caution

may result. Do not immerse in cold water after removing thermometer from food. Allow thermometer to cool

Cleaning & Care

at room temperature.

Do not immerse thermometer in water.

Not for use in

dishwasher. Hand wash stem

with hot soapy water

damp cloth.

and wipe head with

from oven.

bone, fat or gristle.

3. Place meat in oven. When thermometer reaches desired temperature, remove meat

1. Oven Roasting - Be sure

the center before using

meat thermometer.

2. Insert thermometer in the

thickest part of meat to a

point where the tip is 3/4"

past the center of the roast,

but not in contact with

meat is entirely thawed to