



NOTE: There is a static cling label over the digital display and some units have a strip under the battery door to prevent battery drain during shipping. Please remove both before use.

Since 1851, Taylor has been producing quality and accurate thermometers and timers for your kitchens. Our professional standards will provide you with durable and quality performance that you can rely on for great cooking results.

**INSTRUCTIONS FOR USE:**

1. Press 'CLEAR/STOP' to begin timer programming.
2. Key in the desired time using the buttons numbered '0-9'. The time will enter from the right to the left of the display. (e.g. to time 12 minutes 59 seconds, enter 1259.)
3. Press 'START' to start timer.
4. To pause the timer, press 'CLEAR/STOP'. To reset to zero, press 'CLEAR/STOP' again. To restart countdown, press 'START'.
5. When the time reaches zero, the alarm will beep. Press 'CLEAR/STOP' to turn off the alarm.
6. The timer will time up to 99 minutes and 59 seconds.

**BATTERY REPLACEMENT:**

Lift the stand on back of the timer to reveal the screws. Remove screws and slide battery cover off. Replace depleted batteries with new batteries. Follow the '+' and '-' polarity symbols on the exterior of the battery cover. Slide the cover back into place and return screws into holes.

**CAUTION:**

- Do not dispose of batteries in fire. Batteries may explode or leak. Remove the batteries if the unit will not be used for a long period of time.
- Please recycle or dispose of batteries per local regulations.
- Always replace all batteries at the same time, do not mix old and new batteries.
- Do not mix alkaline, carbon zinc (standard) or nickel cadmium (rechargeable) batteries.

**WARNING:**

Batteries may pose a choking hazard. Do not let children handle batteries.

**CLEANING & CARE:**

Do not immerse timer in water or clean in dishwasher.  
Clean with warm, soapy water by wiping with a damp cloth.

